


How to Embroider a Blank Patch

1. Select your blanks. Make sure you order the proper backing for the material the patch will be placed on and the type of equipment you have.

There are two types of backing:

- Sew On – As the name implies, this type of backing is for patches that will only be sewn on
 - Heat Seal – This type of backing is sealed to the garment with a heat press. These patches require a firm pressure and constant temperature. We don't recommend using a household iron. These blanks may also be sewn on.

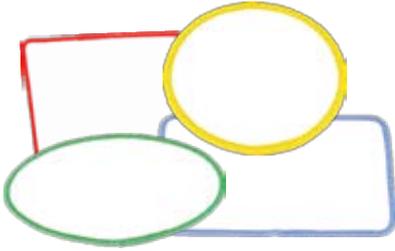

2. Find the center of your patch.

Lay your digitizing spec sheet down over your patch. Plot the center of your design on the patch. Program your machine to start and stop at this point.

3. Secure your patch. Use a large piece of EnMart's Peel & Stick backing, and hoop the backing with the adhesive side up. This will hold the emblem in place.

4. Define your patch outline. Your design should be digitized to include an outline of the patch. Program your machine to stop at the end of it.

5. Sew your patch. Place the blank emblem on to the adhesive backing using the running stitch outline as a template for placement. Restart the machine. It will then sew the rest of your design. Note: If you are doing simple lettering on a patch, or you don't have an outline stitch, use a ruler to align & position your patch onto the Peel & Stick.

6. Your patch is done. Once the machine is done sewing, remove your patch and tear off the excess backing. Your patch is now complete.

EnMart offers blanks in a wide variety of sizes and colors, and we can create custom shapes and sizes upon request. For more information about EnMart's blank patches, please visit www.myenmart.com.



866-516-1300
www.myenmart.com